




HOIST HYDRAULICS (VIC) PTY. LTD.

FITTING INSTRUCTION S/ACTING & D/ACTING AIR CONTROL



WHEN KNOB IS PUSHED IN
AIR SUPPLY IS TO PORT "A"

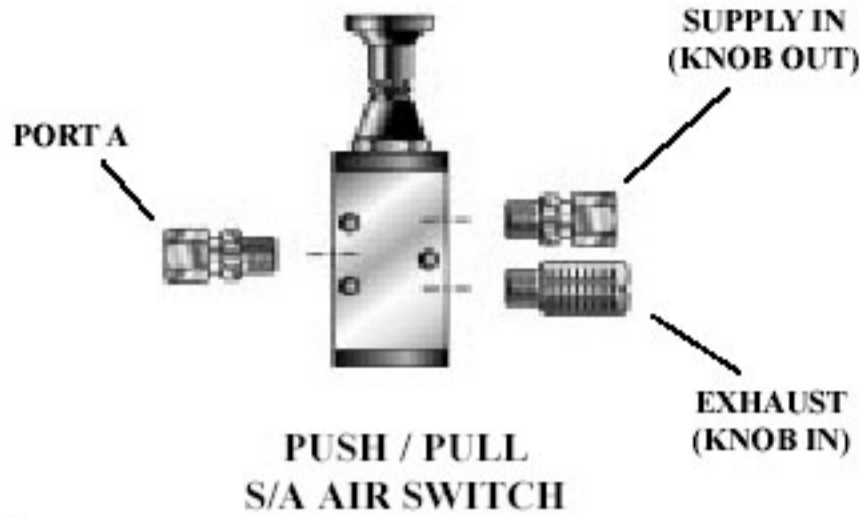

FITTING INSTRUCTION S/ACTING & D/ACTING AIR CONTROL

NOTE:-
AIR SUPPLY IS TO PORT "B"



WHEN VALVE IS ACTIVATED
SUPPLY GOES TO PORT "A"

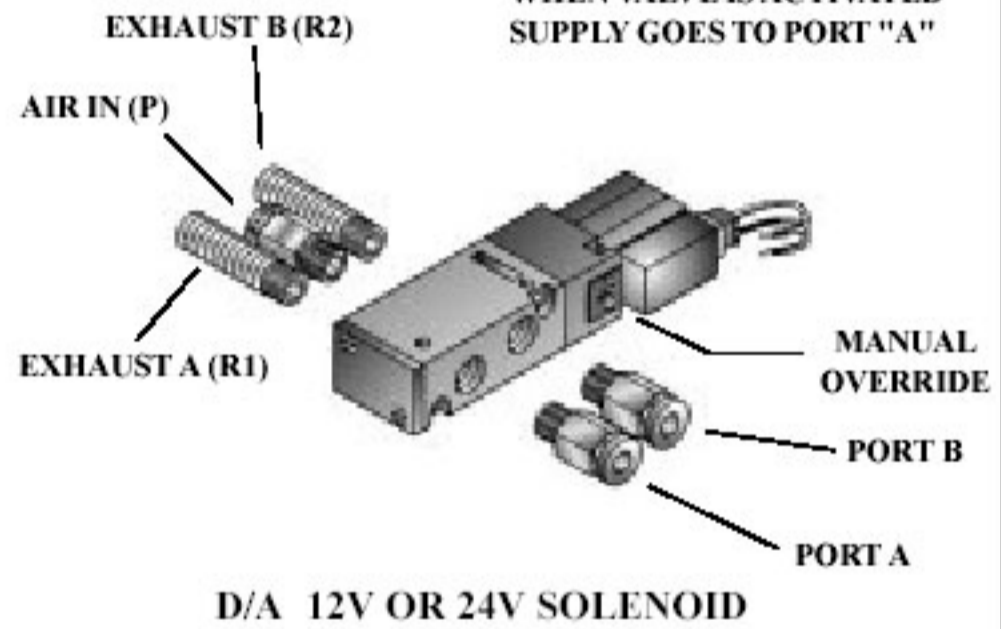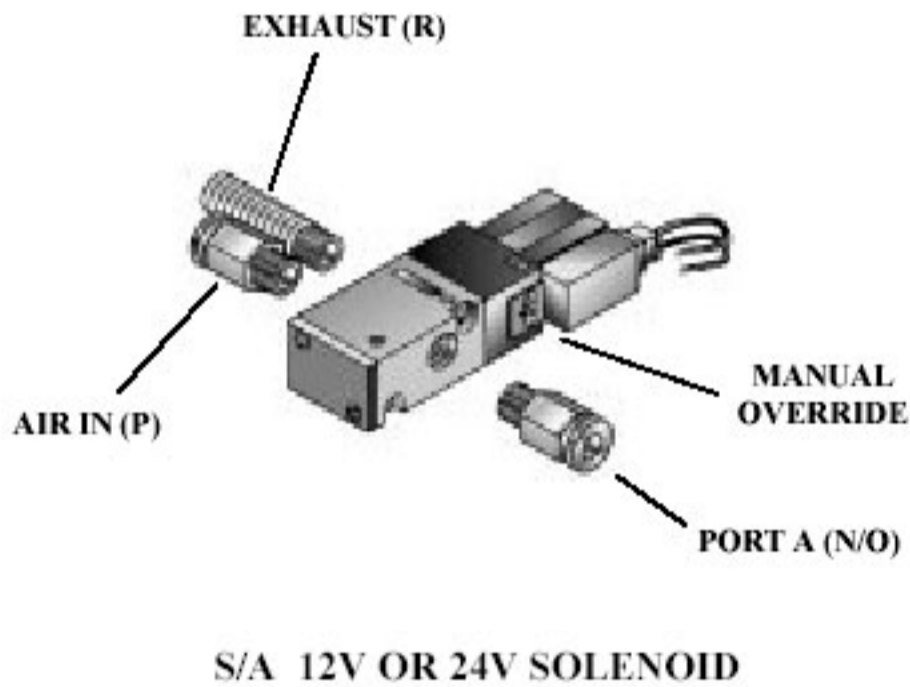

FITTING INSTRUCTION S/ACTING & D/ACTING AIR CONTROL

NOTE:-
AIR SUPPLY IS TO PORT "B"

WHEN VALVE IS ACTIVATED
SUPPLY GOES TO PORT "A"

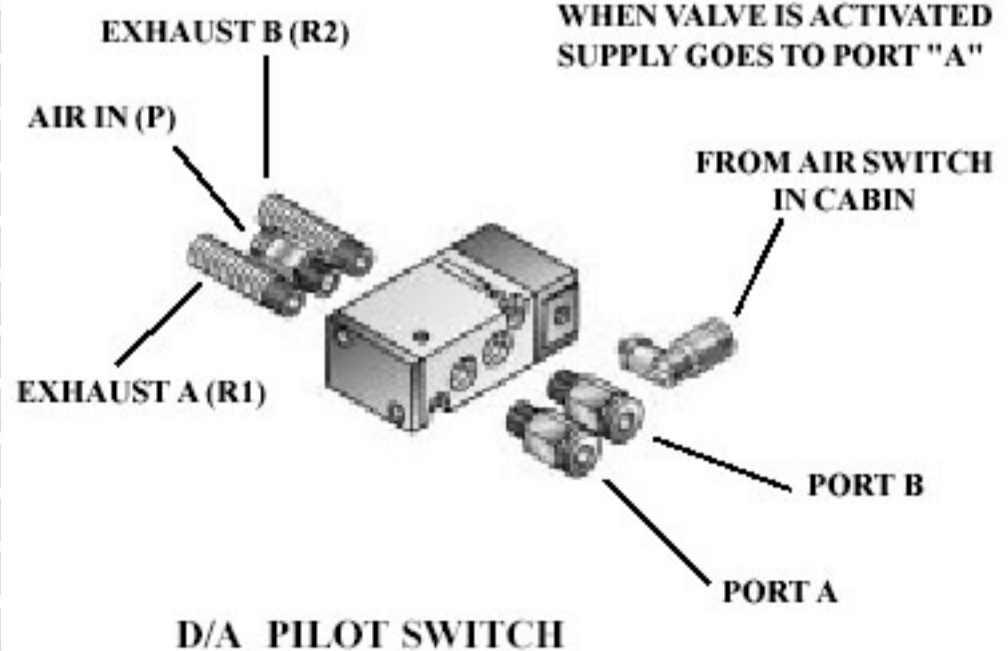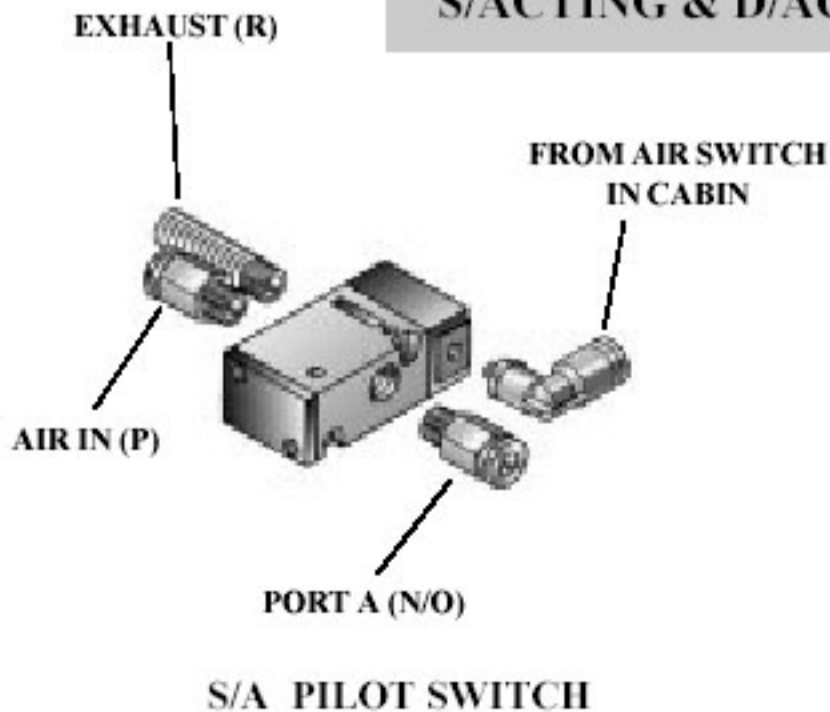

FITTING INSTRUCTIONS