





HOIST HYDRAULICS (VIC) PTY. LTD.


DIVERTER VALVE FITTING INSTRUCTION

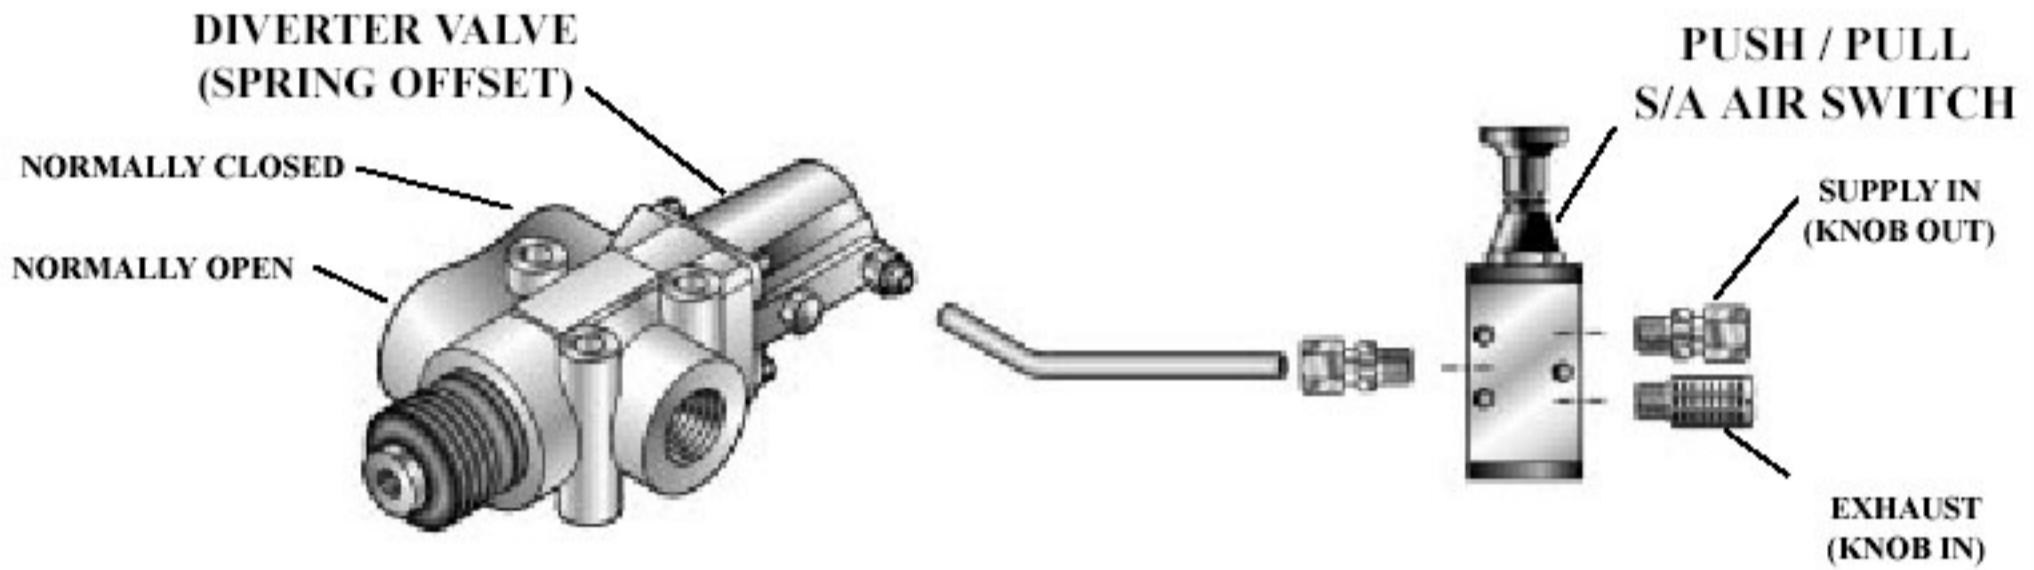

DIVERTER VALVE FITTING INSTRUCTION (SOLENOID TYPE SWITCH)

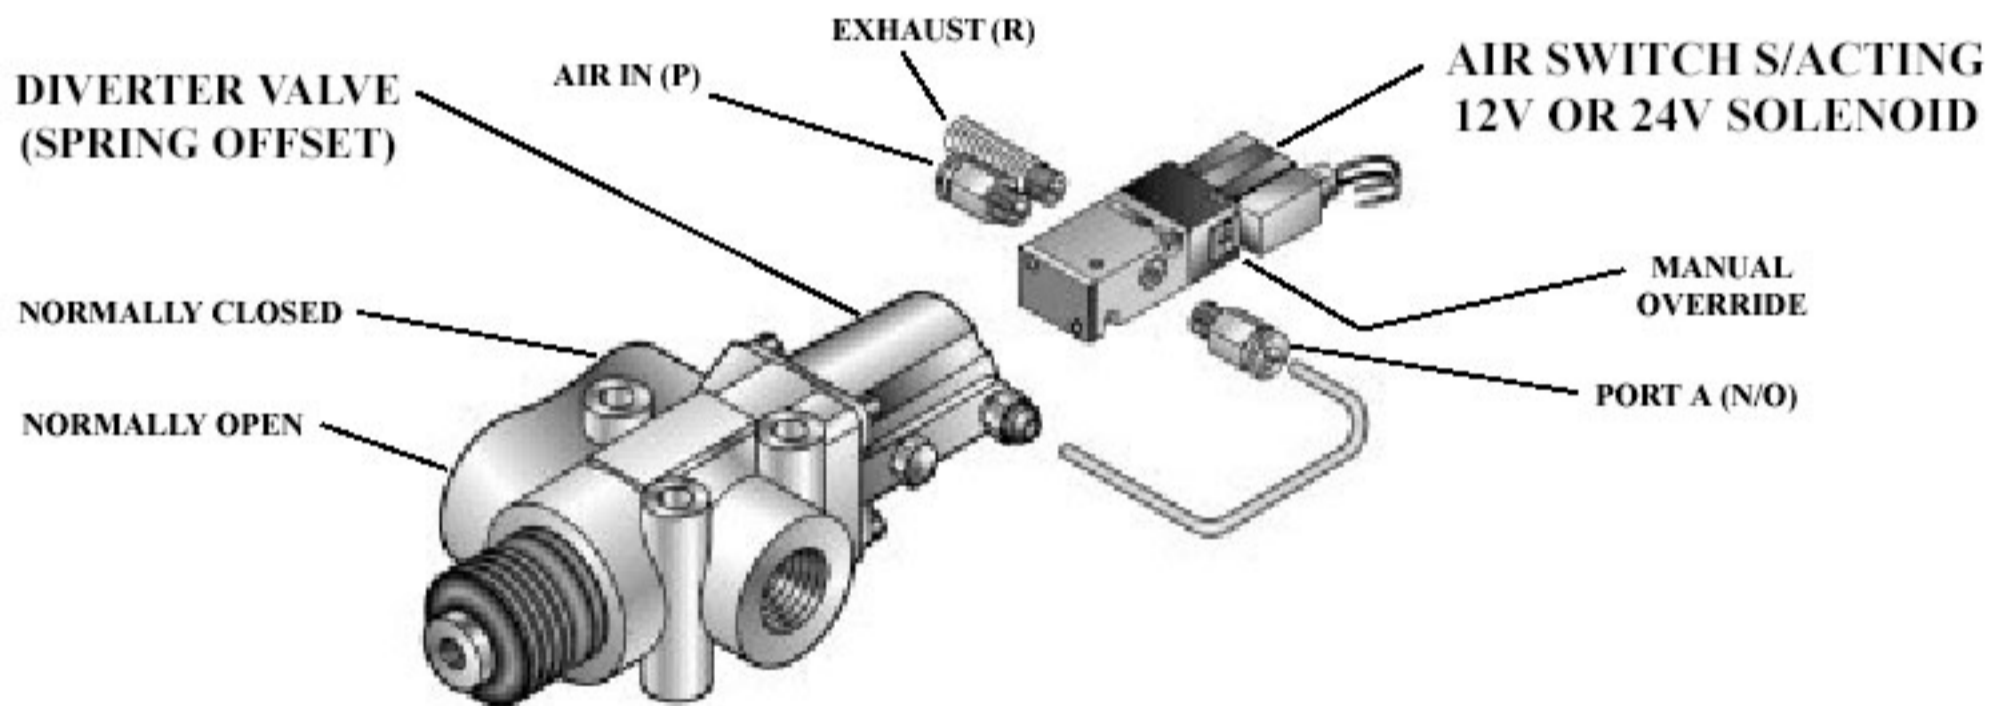

DIVERTER VALVE FITTING INSTRUCTION (REMOTE TYPE SWITCH)

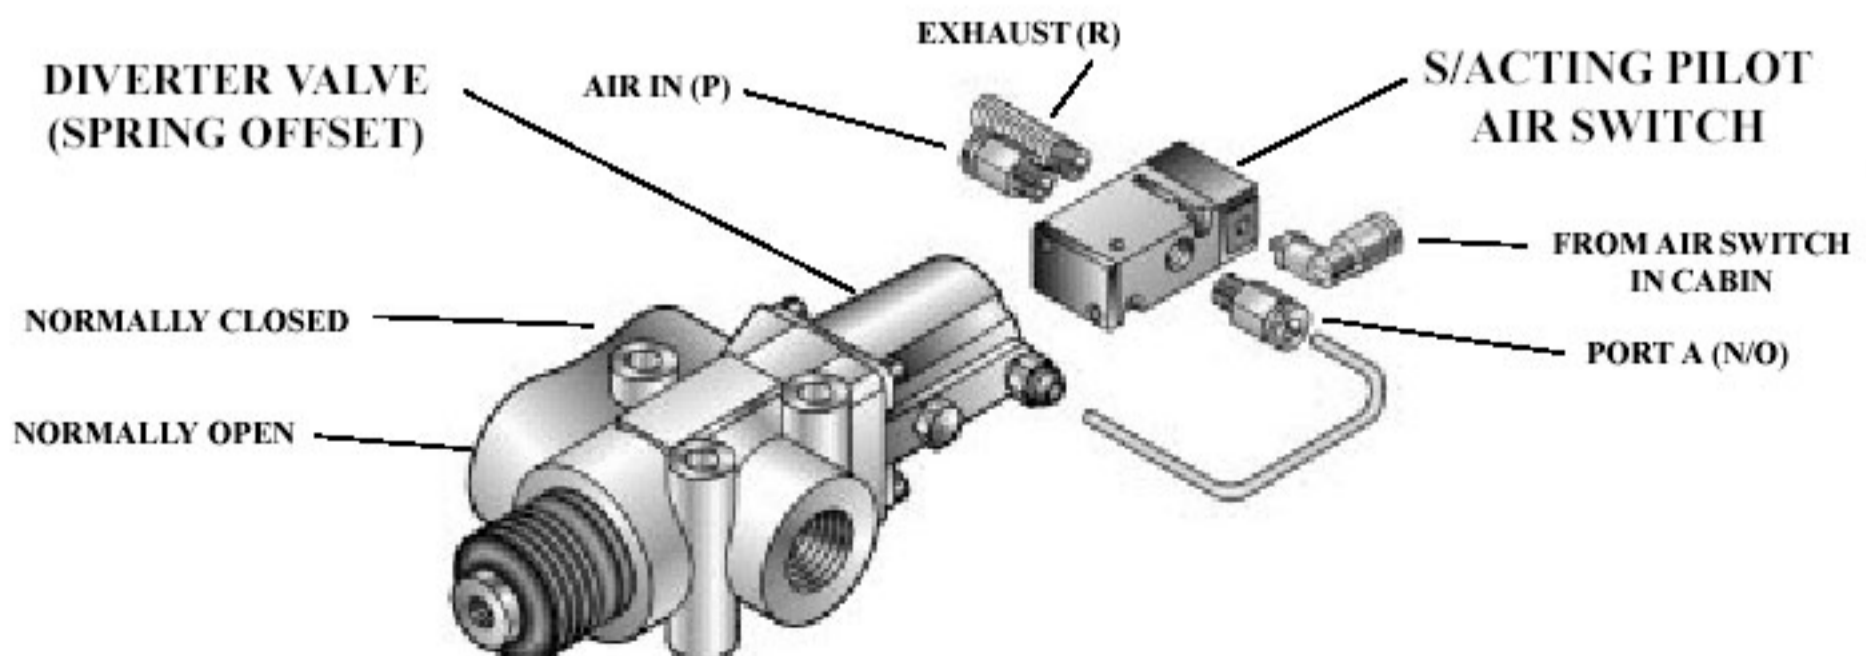

FITTING INSTRUCTIONS